OPTIMUM

4 In 1 Remote Control Instruction Manual Item:323461



Please read these instructions thoroughly before use and retain for future reference.

Instructions for use

Insert 2 x AAA batteries in to the back of the remote control (not supplied)


This Optimum universal remote control can operate the following devices:

TV : Television / LCD / Plasma / Projector /Rear Projector
SAT : Satellite Receiver / Set-Top-Box /DVB-S / DVB-T / Freeview (UK) /TNT (F) / Digitenne (NL) / SAT/HDD
CBL : Cable Converter / Set-Top-Box / DVB-C
VCR : Video Cassette Recorder / TV/VCR Combi / DVD/VCR Combi / PVR
DVD : DVD Player / DVD-R / DVD Home Cinema / DVD Combi / DVD/HDD

There are 3 methods to set up and configure the remote control:


1.Direct code set up

Example: To set up the remote control for your television:
1.Find the code for your device in the Code list. Codes are listed by device type and brand name.
Make sure your device is switched on (not on standby).
2.Press the **TV key** on the Optimum universal remote and hold down for 3 seconds until the LED light stays on.
3.Enter your four digit device code using the number keys (from the code list). The LED light will turn off if the code is valid
4.Now aim your remote control at your TV and press the POWER key – if your device switches off then your remote control is ready to operate your device.
5. Repeat this process for all devices that you wish to programme.

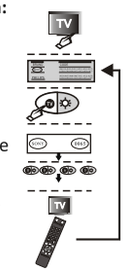


2.Search by Brand Name

Example: To search for your TV brand code:
1.Switch your television on (not on standby) and aim your universal remote control at your TV.
2.Press and hold the **TV key** on your Optimum universal remote control and then press the corresponding brand number from the Brand Name Code Table below.
3.Keep pressing these 2 keys until the LED light indicator

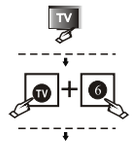

stays on. After 2 seconds the LED indicator light will flash.
4.When the TV is switched off release the 2 keys immediately – the Optimum universal remote control will then save the code and quit the search mode.
5.Repeat this process for all devices that you wish to programme.

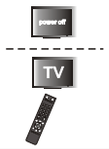


FORM1: BRAND NAME NUMBER

INDEX DIGIT	TV/RTV	SAT	DVD	VCR	COMBI	AUX	HIFI/CD	TNT
1	SONY DENON	SONY KENWOOD	SONY ONKYO DENON KENWOOD	SONY KENWOOD	SONY	SONY ONKYO DENON KENWOOD	SONY ONKYO DENON KENWOOD	SONY ONKYO DENON KENWOOD
2	PANASONIC NATIONAL HITACHI	PANASONIC HITACHI	PANASONIC HITACHI	PANASONIC HITACHI	PANASONIC HITACHI	PANASONIC HITACHI	PANASONIC HITACHI	PANASONIC HITACHI
3	NEC TOSHIBA PIONEER	NEC TOSHIBA PIONEER	NEC TOSHIBA PIONEER	NEC TOSHIBA PIONEER	TOSHIBA	NEC TOSHIBA PIONEER	NEC TOSHIBA PIONEER	NEC TOSHIBA PIONEER
4	SHARP SANYO MITSUBISHI	SANYO MITSUBISHI	SHARP SANYO MITSUBISHI	SHARP SANYO MITSUBISHI	SHARP MITSUBISHI	SHARP SANYO	SHARP SANYO	SHARP SANYO MITSUBISHI
5	JVC AKAI FUJITSU	JVC AKAI	JVC AKAI	JVC AKAI FUJITSU	AKAI	JVC AKAI	JVC AKAI	JVC AKAI
6	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO	SAMSUNG LG DAEWOO
7	PHILIPS THOMSON EMERSON LOEWE	PHILIPS THOMSON	PHILIPS THOMSON EMERSON LOEWE	PHILIPS THOMSON EMERSON LOEWE	PHILIPS THOMSON EMERSON	PHILIPS	PHILIPS	PHILIPS THOMSON EMERSON LOEWE
8	GE TEAC	JERROLD TEAC	APEX TEAC	GE TEAC		TEAC	TEAC	APEX TEAC
9	NAD MAGNAVOX MARANTZ GENERAL	MARANTZ	NAD MARANTZ	MARANTZ GENERAL		NAD MARANTZ	NAD MARANTZ	NAD MARANTZ
0	TECHNICS FISHER ECHOSTAR	ECHOSTAR	YAMAHA TECHNICS SYLVANIA FISHER	YAMAHA TECHNICS SYLVANIA FISHER		TECHNICS	TECHNICS	YAMAHA TECHNICS SYLVANIA FISHER

If your device does not respond to the Optimum universal remote control after you have tried all the codes listed for your brand, try searching for your code.
The Search Method allows you to find the code for your device by
scanning through all the codes contained in the memory of the universal remote control.
The Search Method may also work if your brand is not listed at all.

3.Auto code search

Example: To search for your TV code:
1.Switch your television on (not on standby) and aim your universal remote control at your TV.
2.Press and hold the **TV key** on your universal remote control for 3 seconds until the LED light indicator stays illuminated.
3.Press the POWER key on your universal remote control. The remote will then send a 'power off/on' signal to the TV and the LCD light indicator will flash at the same time.
4.When the TV switches off press the 'OK' key. The code is now stored for your TV.
5.Repeat this process for all devices that you wish to programme.



Spec:3Vd.c.
2XAAA batteries(not included)

B&M L24 8RJ